


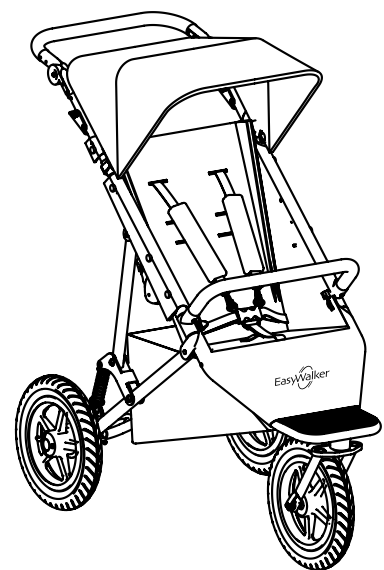

easywalker
SKY




BS 7409: 1996
BS EN 1888



Dutch Design
Made in China















easywalker
SKY

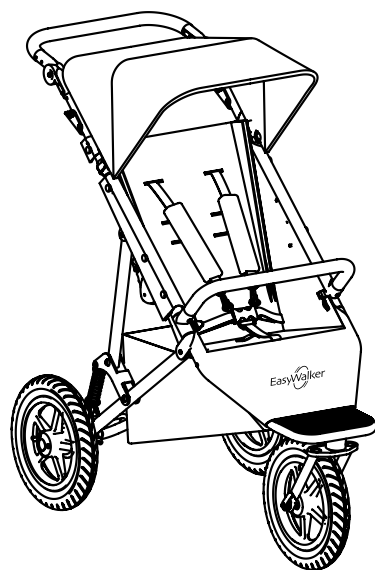


Instructions

EN

easywalker
SKY

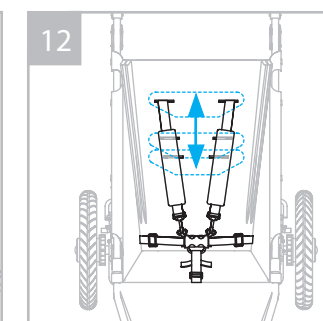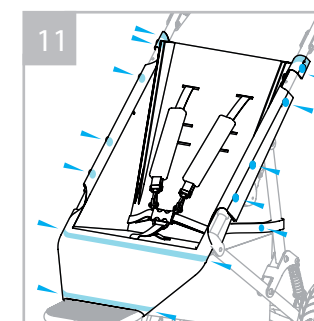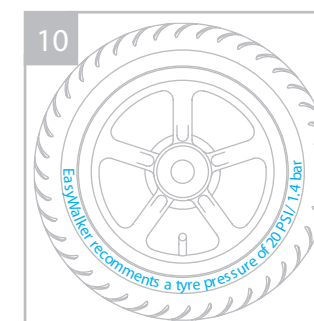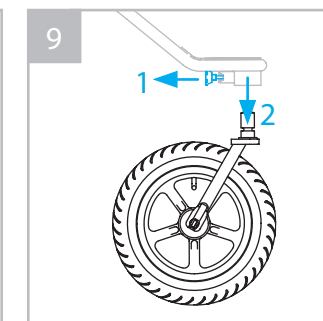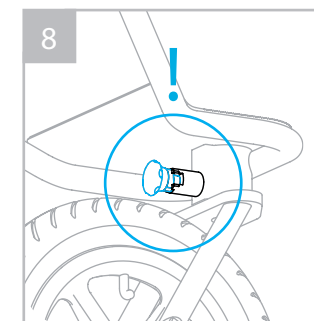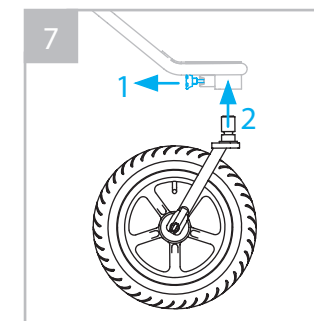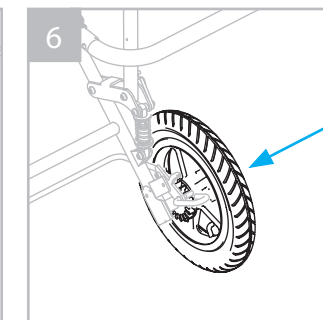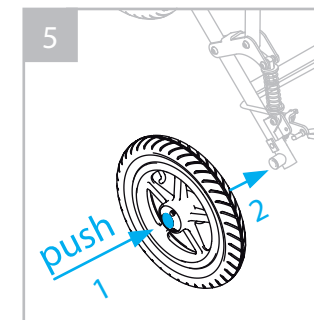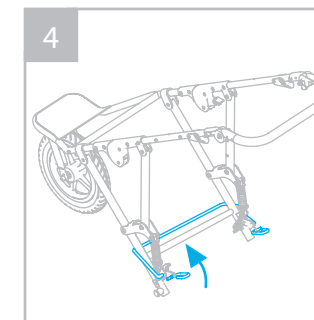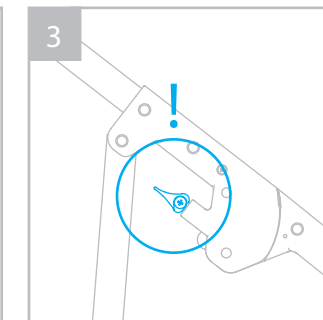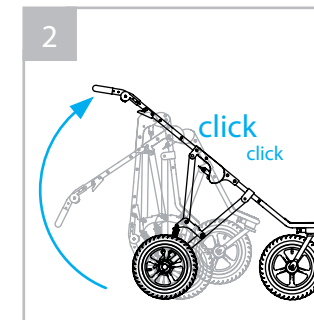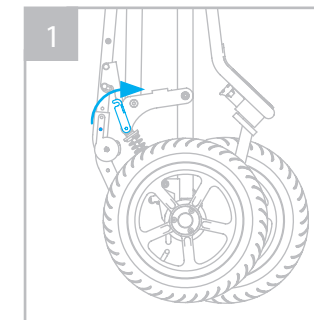

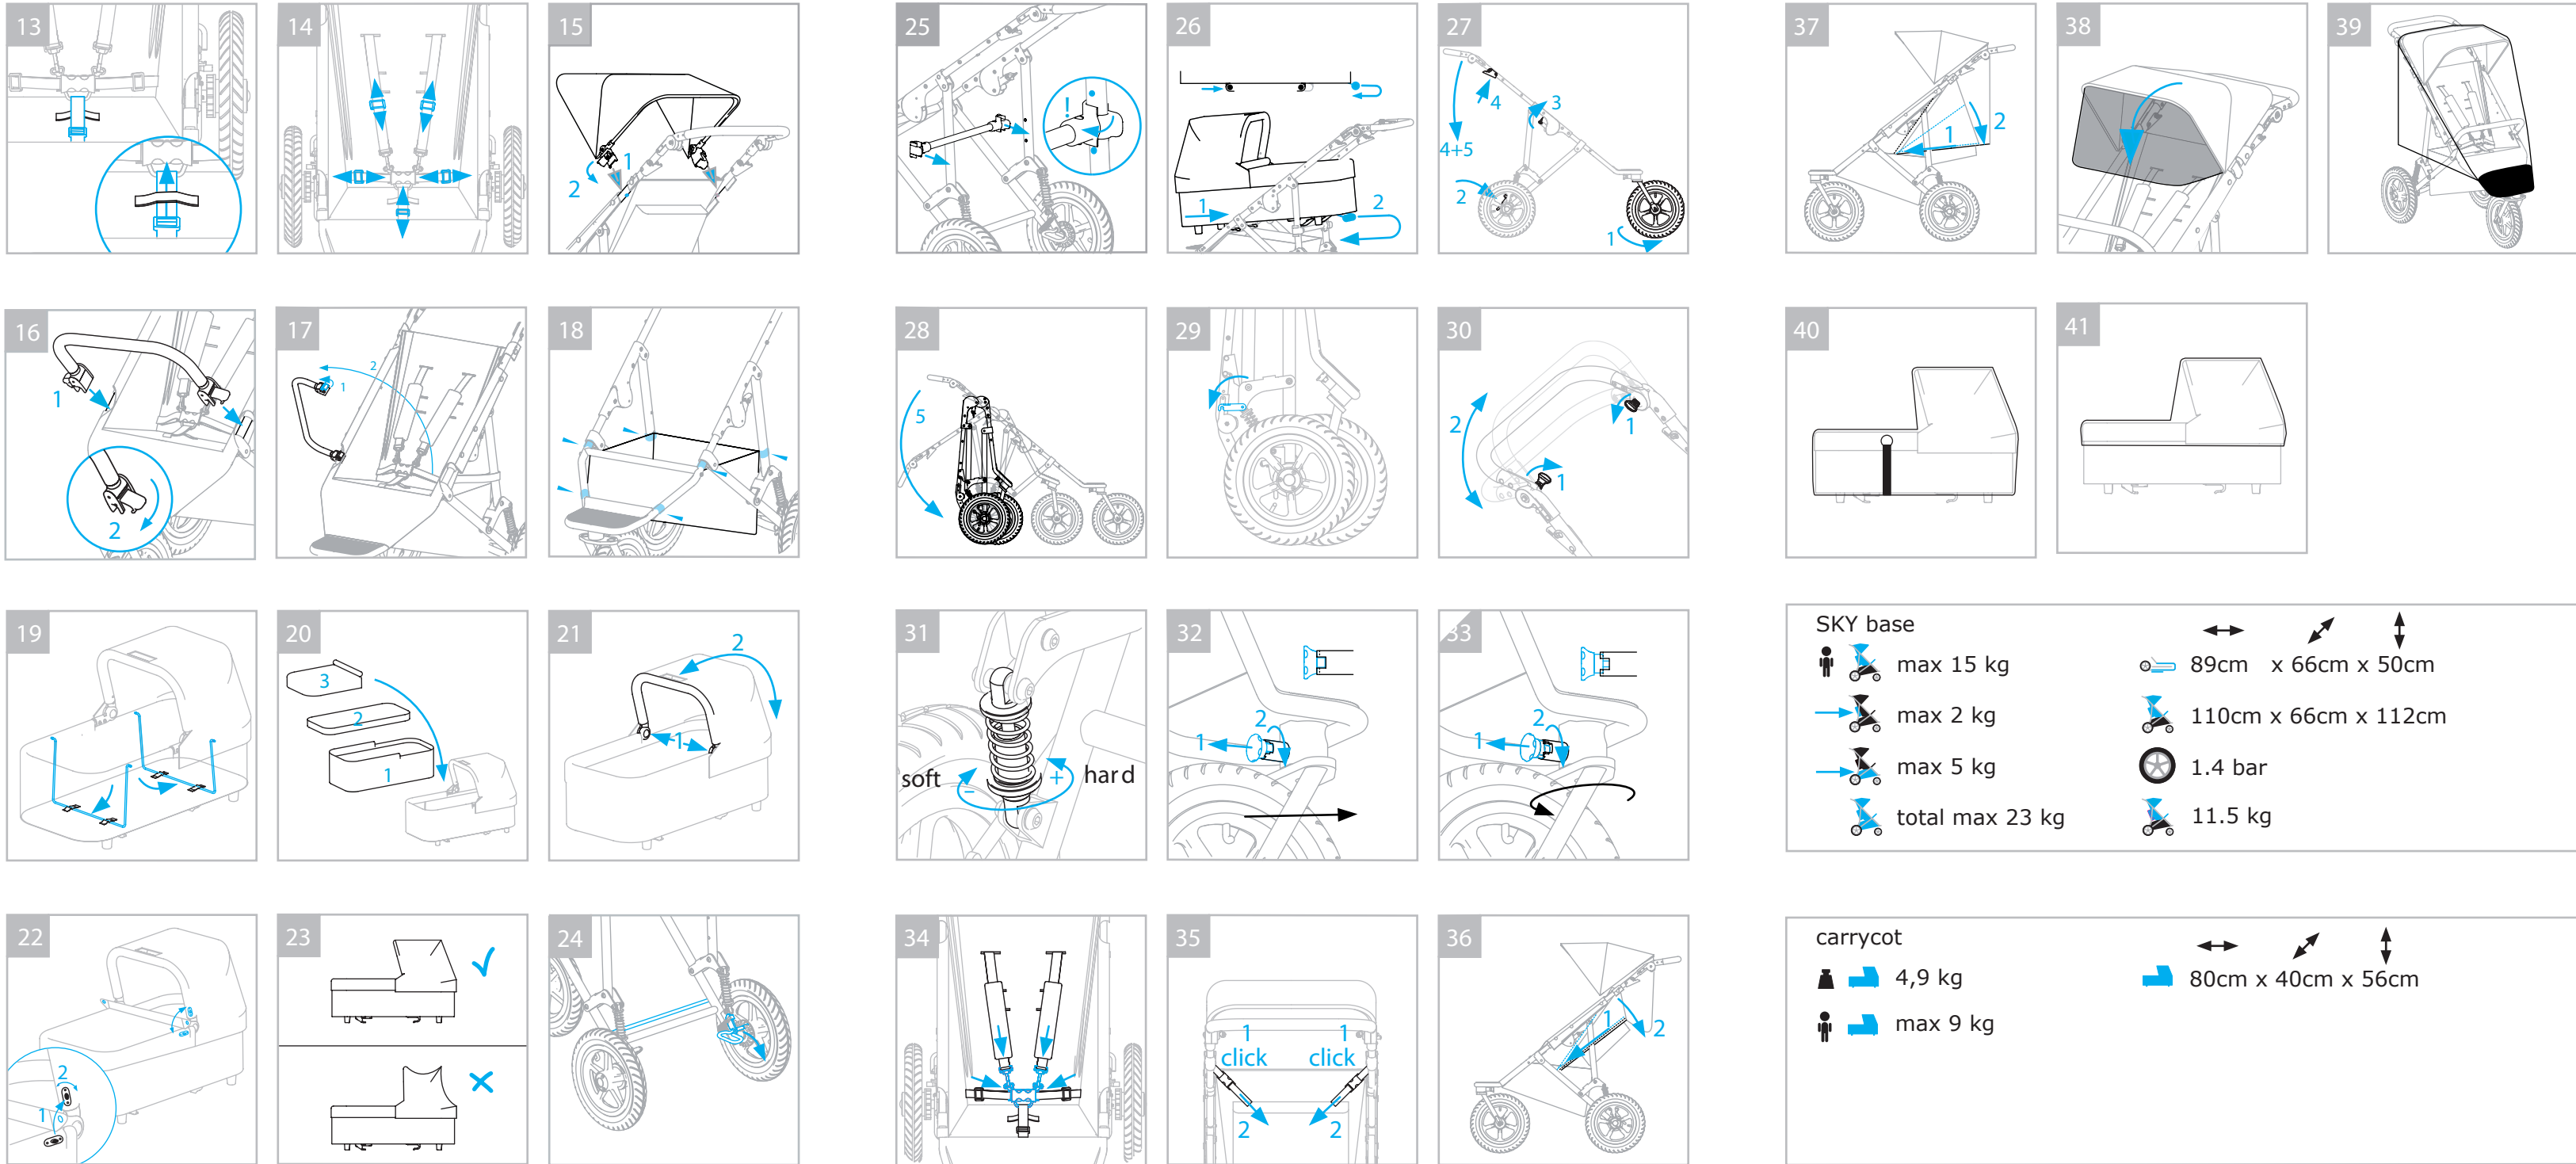

The Netherlands / Head office
Belgium / Luxemburg
EasyWalker bv
P.O. Box 138
1380 AC WEESP
+31-294-230351
www.easywalker.nl
www.easywalker.be
info@easywalker.nl

Distributed in the UK & Ireland by
Bibs and Stuff
+44-1293774924
www.bibsandstuff.com
Sales@bibsandstuff.com
26 Bonehurst Rd,
Salfords Ind Est, Nr Redhill, Surrey, RH1 5EW
England

3	EasyWalker SKY Instructions
4	Assembling the EasyWalker SKY
4	Contents of the box
4	Frame
4	Opening out
4	Wheels
5	Seat
6	5-point harness
6	Sun canopy
6	Bumper bar
7	Storage basket
7	Assembling the EasyWalker carrycot
7	Contents of the box
8	Attaching the carrycot to the frame
8	Removing the carrycot from the frame
8	Using the EasyWalker SKY
9	Parking brake
9	Collapsing and opening out
9	Raising the height of the push-bar
9	Setting the suspension
9	Alter position of swivel wheels
10	Repairing/replacing tires
10	5-point harness
10	Seat and sun canopy
11	Rain cover
11	Using the EasyWalker carrycot
11	Rain cover
11	Mosquito net
12	Maintaining and cleaning the EasyWalker SKY and the EasyWalker carrycot
13	Accessories
13	Guarantee conditions

**WARNING! IT MAY BE DANGEROUS TO
LEAVE YOUR CHILD UNATTENDED**

Children should be harnessed in at all times.

Ensure child is clear of moving parts whilst making adjustments.

This vehicle requires maintenance by the user.

Incorrect folding/overloading and the use of non approved
accessories may break or damage this product.

ALWAYS READ THE INSTRUCTIONS



CARELESSNESS CAUSES FIRE

Tested to ensure compliance with the Furniture and Furnishings
(Fire) (Safety) Regulations. Conforms to BS 7409:1996 and EN 1888:2003

EasyWalker products: Made in China

for UK Distributor: Bibs and Stuff, Surrey, England. RH1 5EW

EasyWalker SKY Instructions

Congratulations on the purchase of your EasyWalker SKY. The EasyWalker SKY has been carefully created with comfort, safety, ease of use and design in mind. The EasyWalker SKY meets all the European standards for child pushchairs: EN1888: 2003+A1: 2005+A2: 2005+A3:2005. EasyWalker products are made in China for Bibs and Stuff, Surrey, England. RH1 5EW. Do not forget to complete the guarantee on the website and send it to us. You can then be sure of the best service and guarantee from EasyWalker.



We wish you a great deal of enjoyment with your EasyWalker SKY.

IMPORTANT: The EasyWalker SKY is intended to be used for children from birth, up to a weight of 15 kg. The EasyWalker carrycot is intended to be used for children from birth to the age of 6 months or 9 kg.

IMPORTANT: A maximum of 5 kilos worth of goods can be carried in the storage basket.

IMPORTANT: The EasyWalker SKY should only be used with the accompanying seat and accessories. Only use the EasyWalker carrycot or accessories approved for use by EasyWalker on the EasyWalker SKY.

IMPORTANT: Ensure that the parking brake is engaged when you place your children in or remove them from the EasyWalker SKY.

IMPORTANT: The EasyWalker SKY is only intended to be used to transport one child. A second child can be carried on an EasyBoard or in the EasyWalker DUO. Have a look at www.easywalker.nl or at the back of these instructions for the options.

IMPORTANT: Only use original EasyWalker SKY accessories. When replacing parts, only use original parts that are supplied and/or approved by EasyWalker B.V. The guarantee is invalidated if the EasyWalker SKY is damaged due to overloading, incorrect use or use of non-original accessories or parts.

- ⚠ **WARNING:** ALWAYS READ THE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. Your child's safety may be affected if you do not follow these instructions.
- ⚠ **WARNING:** A Child's safety is your responsibility.
- ⚠ **WARNING:** The child should be clear of moving parts whilst making adjustments.
- ⚠ **WARNING:** Keep plastic covers away from babies and children to avoid suffocation.
- ⚠ **WARNING:** It may be dangerous to leave your child unattended in the EasyWalker SKY. Never allow children to play with the EasyWalker SKY, they could hurt themselves.
- ⚠ **WARNING:** : Children should be harnessed in at all times. Always use the 5-point harness as soon as your child can sit unaided.
- ⚠ **WARNING:** Always use the crotch strap in combination with the waist belt. when carrying your child in the seat.
- ⚠ **WARNING:** Do not add a mattress thicker than 50 mm in the carrycot.
- ⚠ **WARNING:** Ensure that all the locking devices are engaged before use.
- ⚠ **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use.
- ⚠ **WARNING:** Incorrect folding/overloading and the use of non approved accessories may break or damage this product.
- ⚠ **WARNING:** Carelessness causes fire.

Assembling the EasyWalker SKY

Contents of the box

The following items must be contained in the EasyWalker SKY box:

- 1 frame with a wristband, the seat comprising a left and right part and the storage basket.
- 2 sun canopies, connected.
- 2 rear wheels and 1 front wheel with inflatable tires.
- 1 bumper bar
- 1 rain cover for over the seat with the sun canopy.
- 1 connection tube for use with the carrycot.
- 1 instruction leaflet.

If items are missing, immediately contact the shop where you purchased the pushchair.

 **WARNING:** Keep plastic covers away from children to avoid suffocation.

Be aware of environmental considerations. When disposing of packaging, carefully separate rubbish for recycling.

Frame

IMPORTANT: The EasyWalker SKY should only be used with the accompanying seat and accessories. Only use the EasyWalker carrycot or accessories approved for use by EasyWalker on the EasyWalker SKY.

IMPORTANT: When assembling the EasyWalker SKY a child should not be in the seat or cot.

TIP: If the instructions say left or right, this is always meant when looking from behind the EasyWalker SKY push-bar.

TIP: All components are designed to fit together so you do not need to use force. If something is not working, read the instructions again and try once more. If it still does not work then ask for help in the shop where you purchased the pushchair or go to www.easywalker.nl

TIP: Use the cardboard packaging as a mat whilst assembling the item.

The EasyWalker SKY is easy to assemble. The EasyWalker SKY is supplied with the seat and the storage basket already fitted.

Opening out

 **WARNING:** Ensure that all the locking devices are engaged before use.

Take the frame out of the box and place it on the ground in front of you. You can use the cardboard packaging as a mat whilst assembling the item. If it is still secured, loosen the locking hook and pick up the EasyWalker SKY using the push-bar (image 1). The EasyWalker SKY will unfold by itself (image 2). If you hear a double click, then the EasyWalker SKY has unfolded correctly. Check whether the red safety catch on the right-hand side of the EasyWalker SKY is in the locked position (image 3).

Wheels

Flip the parking brake upwards (image 4). Insert the rear wheel into the rear axle of the frame while you press the button in the middle of the rear wheel (image 5). Release the

button and check whether the wheel is secured by pulling it. Repeat this process on the opposite side with the other rear wheel (image 6).

To remove the rear wheel, press the button in the middle of the rear wheel while pulling the wheel off the frame.

IMPORTANT: The rear wheels cannot be fitted to the frame if the parking brake of the EasyWalker SKY is engaged.

The front wheel is mounted, as standard, on the front fork. You can secure this by fully sliding out the black sliding button of the swivelling wheel underneath the footplate and then positioning the fork in the opening intended for this (image 7). Now release the sliding button and press this in properly. Check that the fork is properly secured (image 8).

To remove the front fork and wheel, slide the black sliding button (underneath the footplate) out completely while pulling the front fork out of its mounting (image 9).

Inflate the tires of your EasyWalker SKY with a pump used for car tires. The maximum pressure for the tires is 1.4 Bar (20 psi) (image 10).

TIP: You can buy a tapering converter at a bike shop so that you can use a bicycle pump to inflate the EasyWalker SKY's tires.

IMPORTANT: The maximum pressure for the tyres is 1.4 Bar (20 psi).

IMPORTANT: Ensure that all of the EasyWalker SKY's tyres are inflated equally. Unequal tyre pressure can lead to instability of the EasyWalker SKY and can impact upon the safety and comfort of your children.

IMPORTANT: If the tyres have been over-inflated, they may explode in hot weather. Make sure you consider raised temperatures in the boot of your car or in a conservatory, for example.

IMPORTANT: There may be grease on the axle; be careful with clothing and never let children play with the wheels.

IMPORTANT: Do not leave the caps from the valves lying around. Prevent children putting them in their mouths.

Seat

 **WARNING:** Children should be harnessed in at all times.

The EasyWalker SKY is supplied with the seat and the storage basket already fitted.

To remove the seat, open the Velcro fastenings behind the footplate. Then open the poppers on the fabric tapes, left and right on the back of the seat. Now open all other poppers and Velcro fastenings on both sides of the seat (image 11).

To put the seat back onto the frame close the poppers and Velcro fastenings on both sides of the seat. Close the Velcro fastenings behind the footplate. Finally, close the poppers on the tapes at the back of the seat around the frame tubes, just above the rear suspension. These tapes are part of the harness and provide extra comfort and security for your child.

 **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use

5-point harness

- ⚠ WARNING: Children should be harnessed in at all times.
- ⚠ WARNING: Always use the crotch strap in combination with the waist strap when putting your child in the 5-point harness.

NE

The EasyWalker SKY seat is supplied, as standard, with the shoulder straps in the highest position. You can set the shoulder straps to a lower position, so that smaller children are seated more comfortably (image 12). To do this, click the shoulder straps to release them from the crotch strap and take the shoulder pads off. Open the zip at the top of the back support. You can now take the shoulder strap through one of the other openings. Click the shoulder strap back onto the crotch strap and shut the zip at the top of the back support.

The EasyWalker SKY seat is supplied, as standard, with the waist strap in the smallest position. You can set the waist strap to a larger position so that larger children can be seated more comfortably (image 13). To do this, take the waist strap out of the loop on the base of the seat.

You can use the sliding buckles to make the shoulder, hip and waist straps tighter or looser (image 14).

TIP: The tapes on the rear of the seat that go around the frame, just above the rear suspension, are part of the harness and provide extra comfort and security for your child. Ensure that these are always closed around the frame.

Sun canopy

In order to attach the sun canopy place it, with open attachment clips, inside the upper recess in the seat fabric, exactly between the two caps on the inside of the frame (image 15).

To remove the sun canopy click and release the attachment clip on the sun canopy on both sides of the push-bar. You can now remove the sun canopy from the frame.

TIP: Give yourself enough space. Before assembling or dismantling, release the poppers around the recess in the seat fabric.

IMPORTANT: After assembly shut all poppers again.

IMPORTANT: A small child has very sensitive skin. Never leave your child in the EasyWalker SKY in the sun without the sun canopy on.

Bumper bar

Place the bumper bar with opened clips on the frame in the lower recesses in the seat fabric and shut both clips (image 16+17). To remove the bumper bar, open the clips and remove the bumper bar from the frame.

TIP: Give yourself enough space. Before assembling or dismantling, release the poppers around the recess in the seat fabric.

IMPORTANT: Before use always check whether the bumper bar is securely fixed to the frame.

IMPORTANT: After assembly shut all poppers again.

Storage basket

The EasyWalker SKY is supplied with the seat and the storage basket already fitted. To remove the storage basket, open all Velcro fastenings and poppers on the front and rear of the storage basket. To reattach the storage basket, put the tapes and Velcro through the buckle around the frame and close the tapes and Velcro fastenings (image 18). The storage basket is accessed easily using the two zip fastenings.



Assembling the EasyWalker carrycot

- ⚠ WARNING: Keep plastic covers away from children to avoid suffocation.
- ⚠ WARNING: Do not add a mattress thicker than 50 mm in the carrycot.
- ⚠ WARNING: Check that the carrycot body or seat unit attachment devices are correctly engaged before use.

IMPORTANT: The EasyWalker carrycot is intended to be used for children from birth to the age of 6 months or 9 kg.

IMPORTANT: Only use the EasyWalker carrycot or accessories approved for use by EasyWalker on the EasyWalker SKY.

IMPORTANT: Ensure that the parking brake is engaged when you place your children in or remove them from the EasyWalker SKY.

IMPORTANT: When assembling the EasyWalker carrycot a child should not be in the cot.

Contents of the box

The following items must be contained in the EasyWalker carrycot box.

- 1 carrycot with sun canopy and cover.
- 1 mattress with fleece and cotton cover.
- 1 rain cover.
- 1 mosquito net.
- 1 sheet cover.
- 1 instruction leaflet.

You will also need the connection tube you received in the box of the EasyWalker SKY.

If items are missing, immediately contact the shop where you purchased the pushchair.

TIP: Use the cardboard packaging as a mat whilst assembling the item.

TIP: If the instructions say left or right, this is always meant when looking from behind the EasyWalker SKY push-bar.

TIP: All components are designed to fit together so you do not need to use force. If something is not working, read the instructions again and try once more. If something still does not work then ask for help in the shop where you purchased the item or watch the instruction video on www.easywalker.nl

The EasyWalker carrycot is simple to assemble. Before using for the first time, take the carrycot out of the box, take the cover off the carrycot and remove the accessories, the mattress and the inside covers. Pull the fastener on the bar (nearest to the head-end) in the direction of the head-end until it clicks, left and right, into the metal holder (image 19). Pull the fastener on the bar (nearest to the foot-end) in the direction of the foot-end until it clicks, left and right, into the metal holder.

Attach the inside covers to the carrycot again with Velcro. Put the mattress back in the carrycot (image 20). You can now choose whether you want the fleece or cotton side uppermost. Turn the sun canopy upwards by pushing the black buttons on both sides of the sun canopy and simultaneously turning the canopy upwards (image 21+23). Ensure that the canopy cannot turn any further and release the buttons. You can choose between various positions. The carrycot can be lifted by the canopy when in the correct angle of 100 degrees. Reattach the cover over the carrycot (image 22).

Attaching the carrycot to the frame

Engage the parking brake of the EasyWalker SKY (image 24). Remove the seat, the sun canopy and the bumper bar from the frame (see the previous pages). Place the connection tube with open clips, on the inside against the frame (image 25). Position between the two caps and shut the left and right clips until they click. Lift up the carrycot using the grips in the sun canopy and under the foot-end. Slide the hooks (under head-end) over the tube at the front of the frame above the footplate. Now pull the hand grip (under the foot-end) backwards so that the clips open and, at the same time, push the clips over the connection tube. Let go of the hand grip under the foot-end suspension. The clips shut by themselves around the connection tube (image 26).

 **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use.

 **WARNING:** Check that the seat is properly attached to the supporting frame and it is securely fixed before you use the EasyWalker SKY.

IMPORTANT: A small child has very sensitive skin. Never leave your child in the EasyWalker carrycot in the sun without the sun canopy on.

Removing the carrycot from the frame

Engage the parking brake of the EasyWalker SKY. To remove the carrycot from the frame, hold onto the carrycot by the hand grips in the sun canopy and under the foot-end. Now pull the hand grip (under the foot-end) backwards so that the clips under the foot-end open and, at the same time, lift the foot-end away from the connection tube. Slide the carrycot towards the head-end, away from the tube at the front of the frame, above the footplate.

TIP: The carrycot has four black feet on the underside so that it can be used as a cot for occasional sleeping without a supporting frame.

TIP: The hand grip in the sun canopy is suitable for lifting the carrycot if it has been lifted up completely. In the bag, at the foot-end, there is an extra hand grip so that you can safely carry the carrycot.

Using the EasyWalker SKY

IMPORTANT: Avoid dangerous situations. Always use the wrist band attached to the push-bar. Take your child out of the EasyWalker SKY if you go up or down stairs, escalators or steep hills.

IMPORTANT: Do not use the EasyWalker SKY if any part is broken, torn, incomplete or does not seem to be functioning correctly.

IMPORTANT: The EasyWalker SKY is not designed for use when jogging or roller skating.

IMPORTANT: The rods between the rear wheels are not suitable for standing on. This is unsafe and can damage the EasyWalker SKY.

Parking brake

IMPORTANT: Ensure that the parking brake is engaged when you place your children in or remove them from the EasyWalker SKY.

Push the parking brake at the back of the frame gently downwards with the foot (image 24). Ensure that the sides of the brake fall into the designated recesses on the rear wheels so that the EasyWalker SKY cannot move. To release the brake on the EasyWalker SKY, push the brake upwards with the foot (image 4).



Collapsing and opening out

 **WARNING:** Ensure that all the locking devices are engaged before use.

You can leave the seat and the sun canopy in place on the EasyWalker SKY when collapsing and folding out. If using the EasyWalker carrycot or a car seat these must first be removed.

Position the front wheels with the wheels swivelled and pull the EasyWalker SKY backwards slightly so that the front wheels turn forwards. Engage the parking brake and turn the sun canopy upwards. Click the red safety catch (located on the right hand side of the frame) upwards. Standing behind the pushchair, squeeze the unlocking handles on both sides of the push-bar. Move the push-bar downwards while keeping the unlocking handles pushed in (image 27+28). You can now close the locking hook on the right-hand side of the frame around the pin for this purpose (image 29).

To open out the EasyWalker SKY, release the locking hook and pull the EasyWalker SKY up by the push-bar. The EasyWalker SKY will unfold by itself. If you hear a double click then the EasyWalker SKY has unfolded correctly. Check whether the red safety catch on the right-hand side of the EasyWalker SKY is in the locked position.

TIP: The four wheels and bumper bar can be removed to make the folded pushchair more compact.

Raising the height of the push-bar

Release the left and right black clips on the inside of the push bar (located just under the foam). Move the push-bar to the desired height and lock the clips (image 30).

Setting the suspension

You can modify the EasyWalker SKY's suspension by tightening or loosening the screw button under the suspension by the rear wheels (image 31). Ensure that the suspension settings are the same on both sides of the frame.

Alter position of swivel wheels

Pull the black sliding button of the swivel wheel (under the footplate) out and turn this a quarter turn (image 32+33). Make sure that the footplate and the front fork click into one another properly. Check that the sliding button fits back properly into the recess intended for this purpose.

IMPORTANT: There may be grease on the axle; be careful with clothing and never let children play with the wheels.

Repairing/replacing tires

Repair a punctured tire in the same way as you would repair a bicycle tire. It is also possible to replace the inner tube. Tire levers must be used to remove the outer tire.

IMPORTANT: There may be grease on the axle; be careful with clothing and never let children play with the wheels.

IMPORTANT: Do not leave the caps from the valves lying around. Prevent children putting them in their mouths.

NE

5-point harness

⚠ **WARNING:** Children should be harnessed in at all times.

⚠ **WARNING:** Always use the crotch strap in combination with the waist strap when putting your child in the 5-point harness.

Place your child in the seat. Click the shoulder strap onto the crotch strap and slide both interlocking parts of the crotch straps into the interlocking part of the waist strap (image 34). The 5-point harness is now closed. To remove your child from the seat, you open the 5-point harness.

IMPORTANT: Ensure that the parking brake is engaged when you place your children in or remove them from the EasyWalker SKY.

IMPORTANT: It is important, for the comfort and safety of your child, that the shoulder straps, the crotch strap and the waist strap are fixed in the right position and are not too tight or loose.

Seat and sun canopy

⚠ **WARNING:** Check that the carrycot body or seat unit attachment devices are correctly engaged before use.

IMPORTANT: Ensure that the parking brake is engaged when you place your children in or remove them from the EasyWalker SKY.

IMPORTANT: Before use always check whether the bumper bar is securely fixed to the frame.

The EasyWalker SKY has four seat settings. If you are using the seat for the first time, all zips on the sides of the seat will be closed, as will the clips above the seat on the back. This is the most vertical position. You can set the seat position by releasing or closing the clips on both sides above the seat (image 35). You can change the position of the seat further by completely opening or closing the zips on the sides of the seat (image 36+37).

IMPORTANT: Open or shut the same zips on both sides of the seat.

TIP: For the comfort of your child, support the seat back with your hand when opening or closing the zips.

TIP: Ensure the zips are always either completely open or completely closed.

There is an integrated UV screen with an UPF protection factor 10 under the sun canopy. This is secured with two buttons under the sun canopy. Release the buttons and fold the screen outwards in order to protect your child against sunlight (image 38).

Rain cover

The EasyWalker SKY is supplied, as standard, with a rain cover for over the seat with sun canopy. Place the rain cover so that the stitching rests on the front and rear edge of the sun canopy and the wide black edge is at the height of the underside of the footplate. Attach the rain cover with the Velcro (image 39).

TIP: The rain cover has reflective stitching so that you are visible to other road users in the dark and during bad weather.

IMPORTANT: The rain cover has ventilation holes on the sides. These ensure fresh air can circulate so do not block them.

IMPORTANT: Do not let your child sit under the rain cover unnecessarily. Ensure that your child does not get too hot.



Using the EasyWalker carrycot

IMPORTANT: Avoid dangerous situations. Always use the wrist band attached to the push-bar. Take your child out of the EasyWalker carrycot if you go up or down stairs, escalators or steep hills.

IMPORTANT: Do not use the EasyWalker carrycot if any part is broken, torn, incomplete or does not seem to be functioning correctly.

IMPORTANT: The EasyWalker carrycot is not designed for use when jogging or roller skating.

IMPORTANT: A small child has very sensitive skin. Never leave your child in the EasyWalker SKY in the sun without the sun canopy on.

IMPORTANT: The EasyWalker carrycot is not a car seat. Transport your child in the car in an approved car seat or in the carrycot with an approved car adapter.-

Rain cover

The EasyWalker carrycot is supplied, as standard, with a rain cover. Place the rain cover so that the stitching rests on the front and rear edges of the sun canopy and the ventilation window is by the opening. Shut the sides by closing the Velcro fastenings and closing the popper. The elastic on the underside rests on the lower edge of the carrycot (image 40).

TIP: The rain cover has reflective stitching so that you are visible to other road users in the dark and during bad weather.

IMPORTANT: The rain cover has a ventilation window at the front that can be closed using Velcro. You can open and secure the window with the button and the elastic loop.

IMPORTANT: Do not let your child sit under the rain cover unnecessarily. Ensure that your child does not get too hot.

Mosquito net

The EasyWalker carrycot is supplied, as standard, with a mosquito net. Place the mosquito net over the carrycot so that it connects properly to the carrycot (image 41).

Maintaining and cleaning the EasyWalker SKY and the EasyWalker carrycot

 **WARNING:** This vehicle requires maintenance by the user.

NE

IMPORTANT: The EasyWalker SKY is only intended to be used to transport one child. A second child can be carried on an EasyBoard or in the EasyWalker DUO. Have a look at www.easywalker.nl or at the back of these instructions for the options.

IMPORTANT: Only use original EasyWalker SKY accessories. When replacing parts only use original parts that are supplied and/or approved by EasyWalker bv. The guarantee is invalidated if the EasyWalker SKY is damaged due to overloading, incorrect use or use of non-original accessories or parts.

IMPORTANT: Always be careful with open fires and other heat sources in the vicinity of the EasyWalker SKY and your child.

The EasyWalker SKY and the EasyWalker carrycot have been carefully created with comfort, safety, ease of use and design in mind. The EasyWalker SKY and the EasyWalker carrycot meet European safety standards. Assembly and use are comprehensively explained in the instructions.

If you follow the directions given in these instructions for use properly, you will have many years of pleasure with our products. However, you are advised to regularly check your EasyWalker SKY and EasyWalker carrycot. It is recommended that you have your EasyWalker SKY serviced at the shop where you bought it once every two years. If you have any doubts about the state of one or more of the components in the interim, contact the shop where you purchased the item. They will assess the EasyWalker SKY and the EasyWalker carrycot and carry out simple repairs. The shop owner will always contact the manufacturer should there be serious problems.

IMPORTANT: Keep your proof of purchase and the instructions safely.

IMPORTANT: The serial number of the EasyWalker SKY can be found on the inside of the tube on which the left-hand side of the rear wheel is attached.
of the frame. The serial number of the covers and other fabric parts can be found on the fabric labels. The serial number for the EasyWalker carrycot can be found on the fabric label.

Regularly clean the EasyWalker SKY. Use a damp cloth for this and a mild cleaning solution if necessary. The swivel wheel holder and the rear wheel axles regularly get dirty. Take the wheels out of the holder or axle on a regular basis and clean with lukewarm water. Ensure that all parts are dried thoroughly and oil the axles lightly with oil or silicone spray before replacing the wheels. Protect the foam on the push-bar against friction and sharp objects. Avoid exposing the EasyWalker SKY to extreme temperatures.

Fabrics used on the EasyWalker SKY and EasyWalker carrycot are removable and can be washed in the washing machine. Never bleach, dry-clean or wash the fabrics at over 30 degrees and never dry in the tumble dryer. Before washing always remove the fastenings, foam and plastic or metal parts. Always refer to the washing label on each part. The EasyWalker SKY is not resistant to salt water so do not use it in the sea. During wet weather always use the rain cover supplied for the seat with the sun canopy or the carrycot. If the EasyWalker SKY and the EasyWalker carrycot are wet due to cleaning or rain, do not collapse but leave to dry opened out in a well-ventilated room. This prevents the formation of mould. Parts of the EasyWalker SKY and the EasyWalker carrycot can slightly discolour or become worn as a result of weather conditions and usage. This can also occur with normal usage.

TIP: In order to avoid a colour difference, you are advised to wash items of the same colour together.

Accessories

IMPORTANT: Only use original EasyWalker SKY accessories. When replacing parts, only use original parts that are supplied and/or approved by EasyWalker B.V. The guarantee is invalidated if the EasyWalker SKY is damaged due to overloading, incorrect use or use of non-original accessories or parts.

⚠ WARNING: Any load attached to the handle affects the stability of the pram/pushchair.

The EasyWalker SKY and the EasyWalker carrycot have been carefully created with comfort, safety, ease of use and design in mind. The EasyWalker SKY and the EasyWalker carrycot are supplied, as standard, with the most important accessories. In addition to the standard kit, EasyWalker also offers a wide range of accessories. Go to www.easywalker.nl for the options.

Summary of the available accessories for the EasyWalker SKY:

- EasyWalker carrycot
- EasyWalker Maxi-Cosi Cabrio adapter
- EasyWalker nursery bag
- EasyWalker foot muff
- EasyWalker cupholder
- EasyWalker parasol
- EasyWalker UV-mosquito net
- EasyWalker travel bag
- EasyBoard
- EasyWalker BeSafe iZi Sleep adapter
- EasyWalker universal car seat adapter
- EasyWalker mini pump

Guarantee conditions

In its capacity as manufacturer, EasyWalker provides a guarantee for EasyWalker SKY's and EasyWalker carrycots produced by them, under the following conditions:

The guarantee commences on the date stated on the proof of purchase and is valid for two years. This is in accordance with the manufacturer's (importer's) specification concerning correct use of the product or what may be expected as normal when using it. The guarantee for rims, outer tires, inner tubes, foam, spokes, covers and accessories only relates to construction and/or material faults. If you should encounter defects you should go back to the shop where you purchased the item. If they cannot help you with your problem the shop will send the product back to the manufacturer with a clear description of the problem as well as a copy of the proof of purchase with date. You cannot demand an exchange or refund. Repairs allow the guarantee period to be extended. EasyWalker is never liable for damage other than to the product produced by EasyWalker.



A guarantee is not provided if:

- The product is provided to the manufacturer/importer without a copy of the original purchase receipt.
- Defects have been caused by incorrect use or maintenance, deviating from what is stated in the instructions or what can be expected as reasonable when using the product.
- Repairs to the product have been carried out by third parties without prior consent from the manufacturer.
- The defect has been caused by neglect.
- The defect was caused as a result of an accident.
- It involves normal wear and tear that may be expected with daily use.
- It concerns the loss of parts.
- Damage caused by using accessories of another brand.
- Otherwise not conforming with the aforementioned guarantee conditions.

In the latter situation, the ultimate decision as to whether the part falls under the guarantee will be taken by the manufacturer's service department. Above guarantee conditions are supplementary to legal rights. The guarantee only applies to the first owner and is not transferable.

IMPORTANT: Keep your proof of purchase and the instructions safely.

IMPORTANT: The serial number of the EasyWalker SKY can be found on the inside of the tube on which the left-hand side rear wheel is attached.

The serial number of the covers and other fabric parts can be found on the fabric labels. The serial number for the EasyWalker carrycot can be found on the fabric label.

If you have any questions please ask in the shop where you purchased the EasyWalker SKY and the EasyWalker carrycot. Ensure you have the following details to hand:
Type of EasyWalker and the serial number of the frame and covers.
Purchase receipt

In order to improve the EasyWalker SKY and the EasyWalker carrycot we would love to hear your opinion. This may concern design, use, materials and instructions. Mail your ideas to info@easywalker.nl

We wish you a great deal of pleasure when using your EasyWalker SKY.

EasyWalker bv

The utmost care was exercised in designing and compiling these instructions. We cannot, however, offer any guarantees with regard to the completeness and correctness of the information contained herein.